



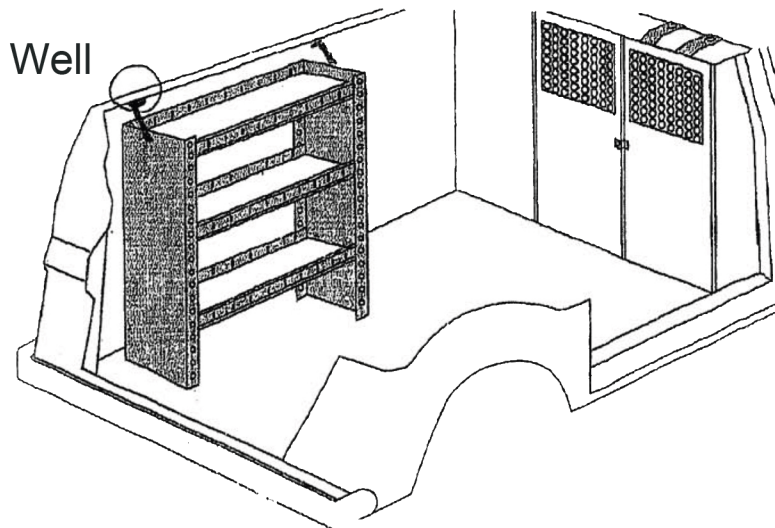

Shelving Unit Position Over Wheel Well

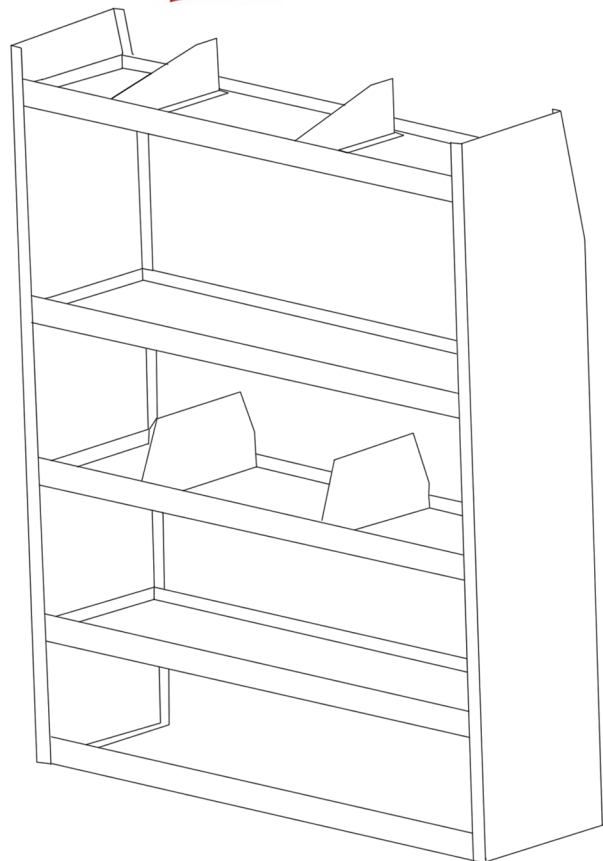



Assembly:

1. Take the side panel with sticker attached
2. Take one the tray with sticker (Top) and connect to the sticker on the side panel.
3. Attach side panel to tray using bolts and flanged nuts.
4. Repeat step 2 and step 3 for other trays.
5. Attach the bottom angle underneath a shelving unit there is 4 holes for it.
6. Align the plastic back with holes at the back and secure it with bolts and flanged nuts.
7. Nicely tighten with impact driver.

****Shelving Unit with Door Kit comes***

****All Tray are adjustable (except Top).***

****For Aluminum Shelving Units If you want to connect 2 shelves together, please use longer bolt***

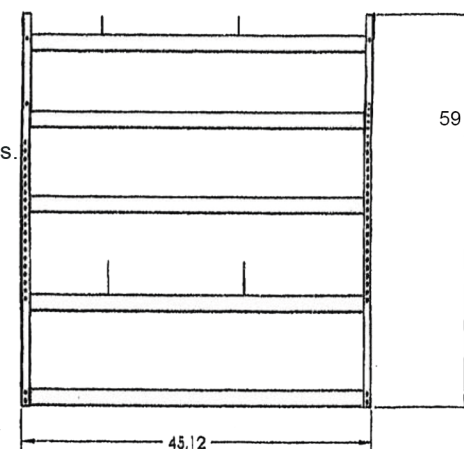

Bottom Tray Positioning:



Ford Transit or Nissan NV: If you want your tray at the very bottom please use the last hole.

Mercedes Sprinter: If you want your tray at the very bottom please use the 2nd hole from bottom.

Dodge ProMaster: If you want your tray at the very bottom please use the 7th hole from bottom.

Floor Installation

Top Installation

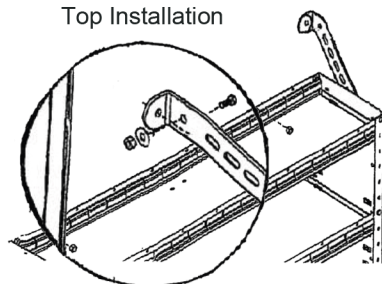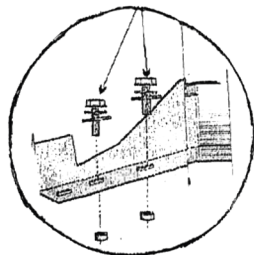

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS, AND CAUTIONS. USE THIS PRODUCT CORRECTLY, AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED.

FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY.

CAUTION: Prior to drilling, so as not to cut electric wires, fuel lines, brake lines, etc. check behind and underneath drilling and mounting locations. Failure to heed this warning will result in death or serious injury.

Installation Instruction – Ford Transit / Transit Connect / Mercedes Sprinter / Metris / Dodge ProMaster / Nissan NV’s

Tool / Material Requirements:

1. Drill; 2. Impact Driver; 3. 7/16 Nut Driver; 4. 3/8 Drill Bit; 5. 9/16 Wrench 6. Plus Nut Installation Tool (provided in the package);

		
Drill	Impact Driver	7/16 Nut Driver
		
Drill Bit	9/16 Wrench	

IMPORTANT: *Installation may require two people to install correctly.*

- Step 1:**
Position assemble in your vehicle.
Mark through the bottom shelving slots
2 drilling points(one on each side) pos 1.



pos 1.

- Step 2:**
Drill marks.
DO NOT APPLY TOO MUCH PRESSURE WHILE DRILLING AS THIS MAY CAUSE IN DAMAGING (GAS LINES, WIRE HARNESS).
WEAR PROTECTIVE GLASS WHEN DRILING

Step 3:

Insert Plus Nut(pos 2). into hole and fix it with Tool (provided in the packege) and Impact Driver with 7/16 Nut Driver. Make sure Plus Nut and Installation Tool(pos3) do not turn during installation process (pos 4)

Step 4:

Position your shelving unit back to the place, insert bolts and tight them up. Repeat Step 1 to Step 4 for Top brackets.



pos 2.



pos 3.



pos 4.

Watch Installtion Video scan QR code below

