


Van Partition Assembly Instruction VP - GM GMC Savana / Chevy Express

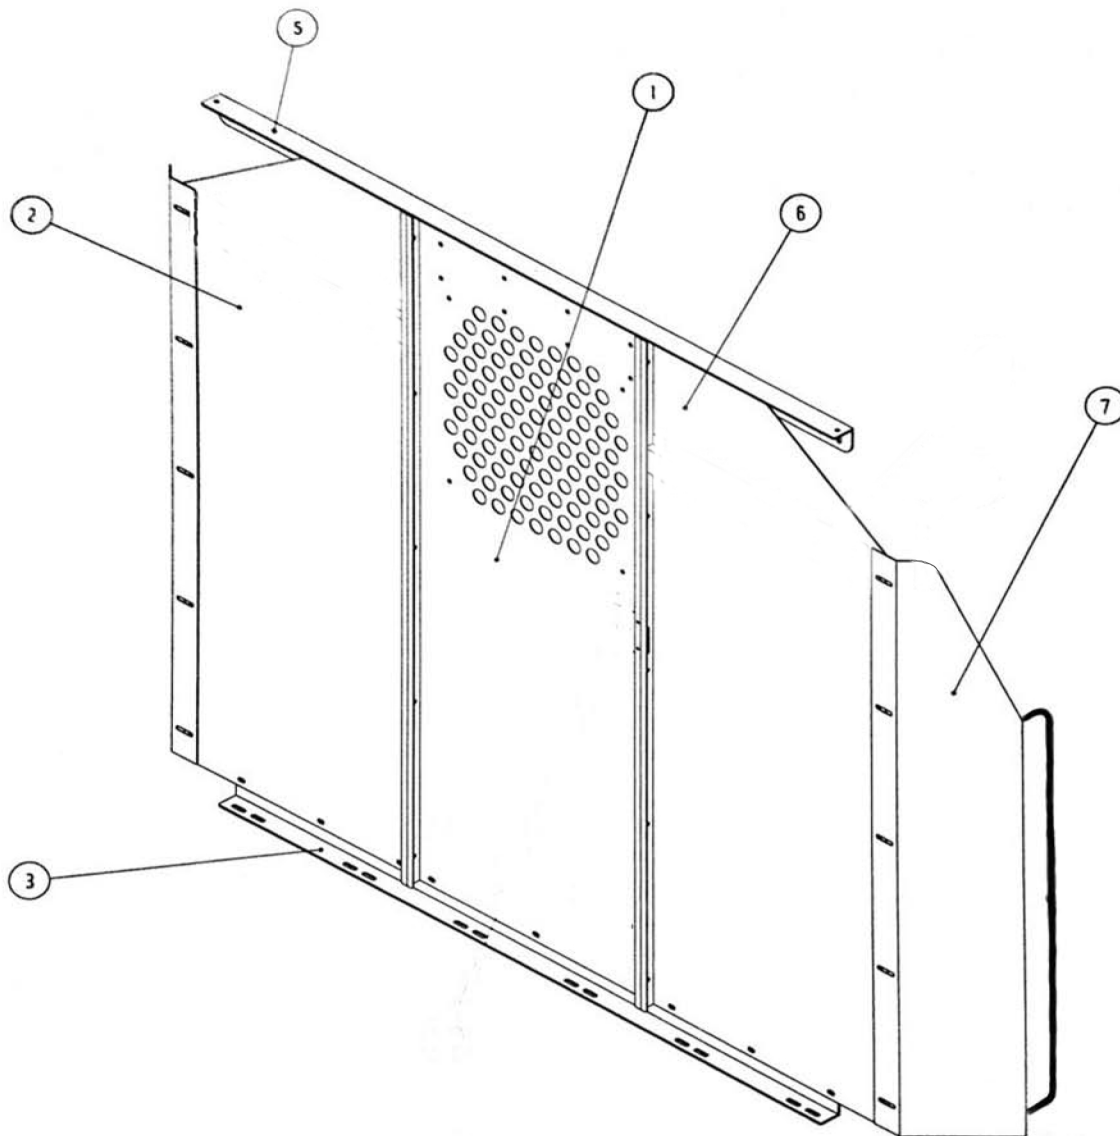

Assemble partition as shown. Attach Reinforcement plates (4)

Attach Bracket (8) to the side wing on curbside and fix with self tapping screw to the pillar above.



Do Not use Van Partition parts if any parts missing or damaged, as this may cause failure or/and personal injury


WARNING! Inspect Vehicle for Gas Tank, Gas / Brakes Lines location before drilling any holes.




Assemble Van Partition prior installation.

Adjust Driver's and Passenger's seats all the way forward. Uninstall plastic trims from **B Pillar**


Move and center Partition between B Pillars. Align Partition to make it vertical.

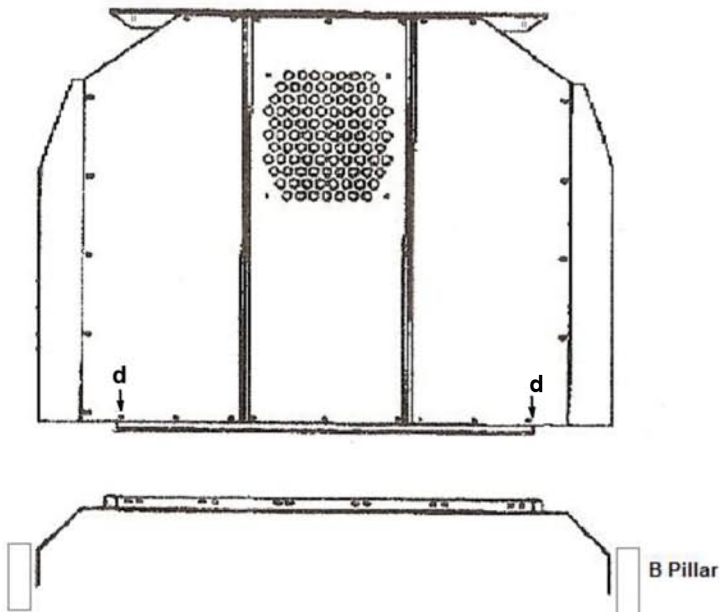


Secure **Partition Top Support 5** to the rib of the Van. Some Vehicles have pre-designed hole to install $\frac{1}{4}$ screws.

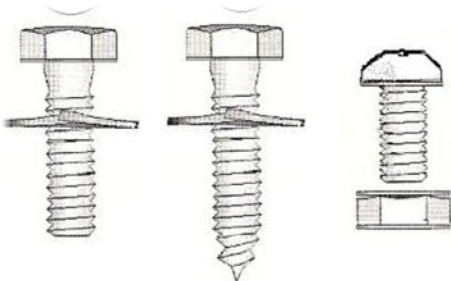

Secure **Partition Top Support 5** to the rib of the Van. Position Partition (side wings with protective rubber) close to plastic pillars.

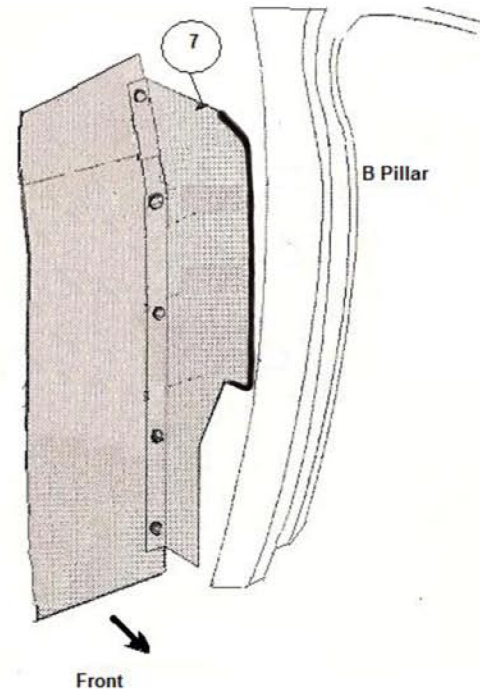

Align Partition ensuring Partition is vertical. Mark the Floor through **Partition Base Support 3** slots.

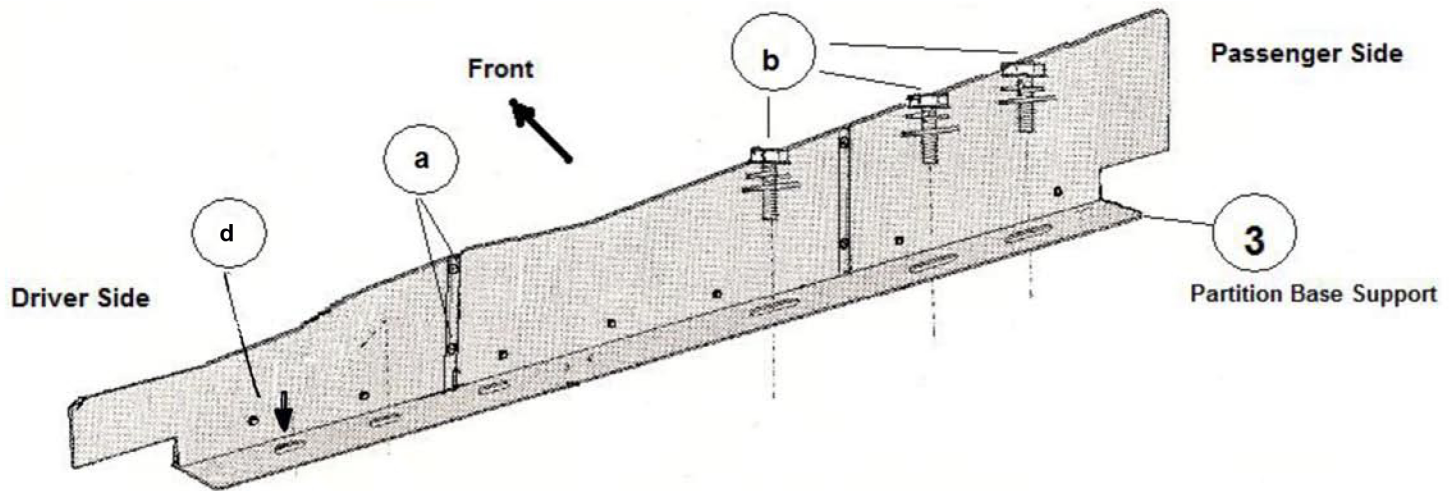

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS, AND CAUTIONS. USE THIS PRODUCT CORRECTLY, AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY

WARNING! The warnings, cautions and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood that common sense and caution are factors which cannot be built into this product, but must be applied by the operator.