
CANADIAN VAN
Equipment

Van Partition Assembly Instruction VP- TC Ford Transit Connect 2014 - 2023

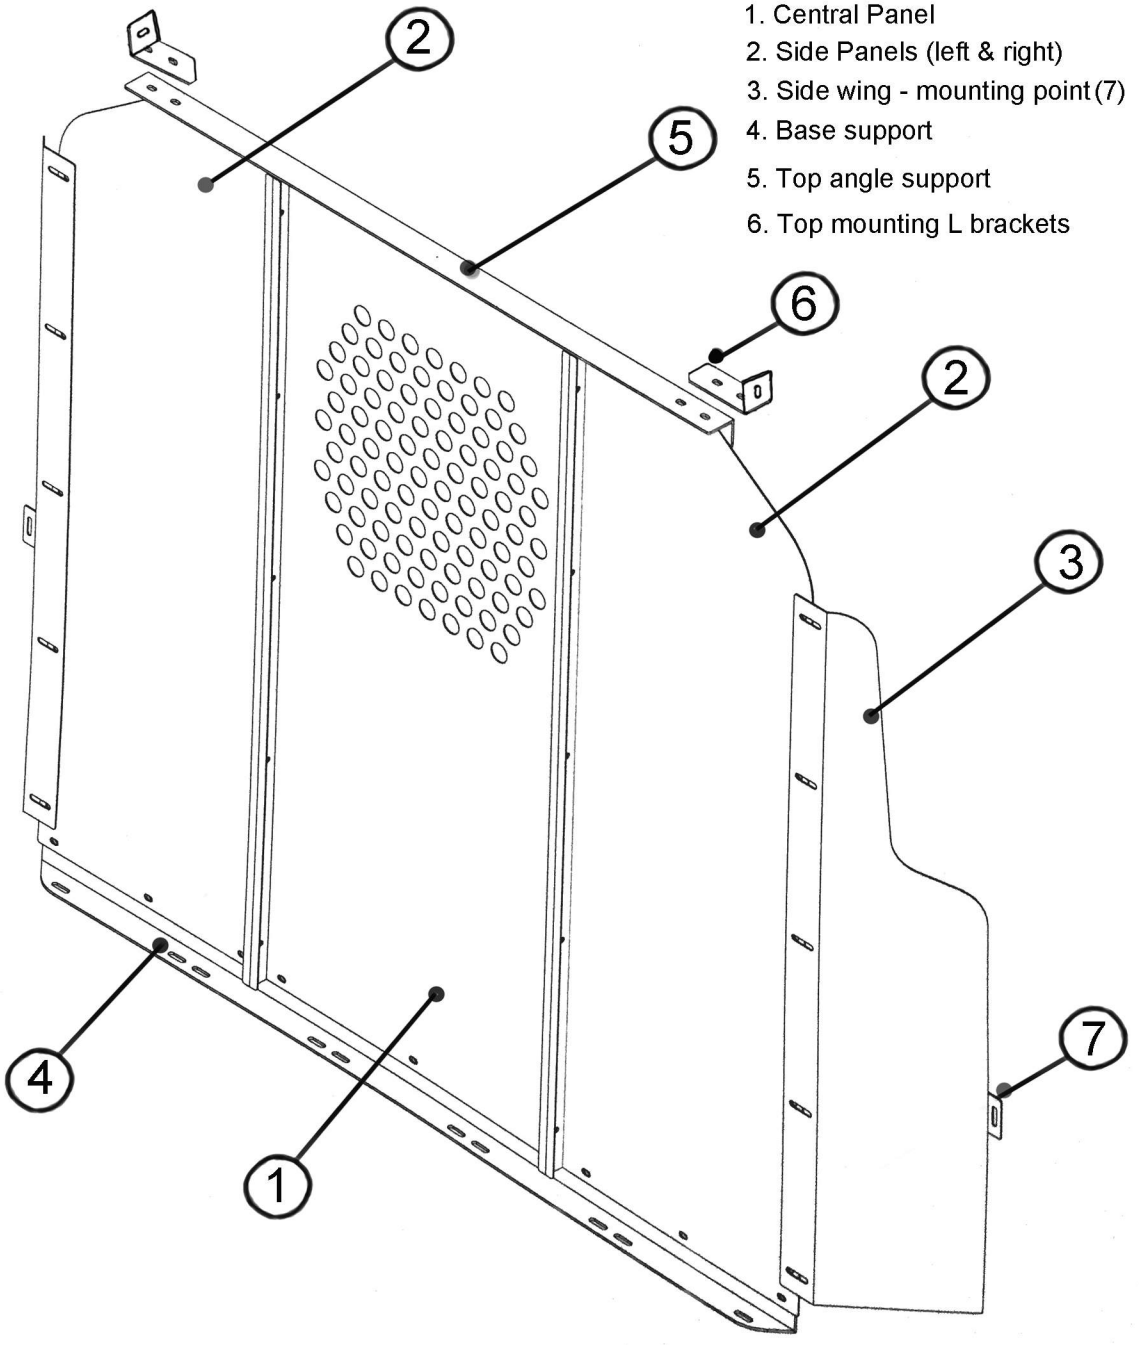

☑ ***Do Not use Van Partition parts if any parts missing or damaged, as this may cause failure or/and personal injury***

WARNING! Inspect Vehicle for Gas Tank, Gas / Brakes Lines location before drilling any holes.

Installation Instructions - Transit Connect Partition

Tools / Material Required: 1. Drill; 2.Impact Driver; 3. Nut Driver Socket. 4. Drill Bit (according the size of plus nut provided) 5. Plus nut Installation Tool (provided in the Package)


 1. Cordless Drill	 2.Impact Driver	 3. Nut Driver
 4.Drill Bit	 5. Wrench /Ratchet	

IMPORTANT: It may require two people to install Transit Connect Partition correctly.

1. - Fully Assemble Partition outside your vehicle.

2. - Position assembly in your vehicle.



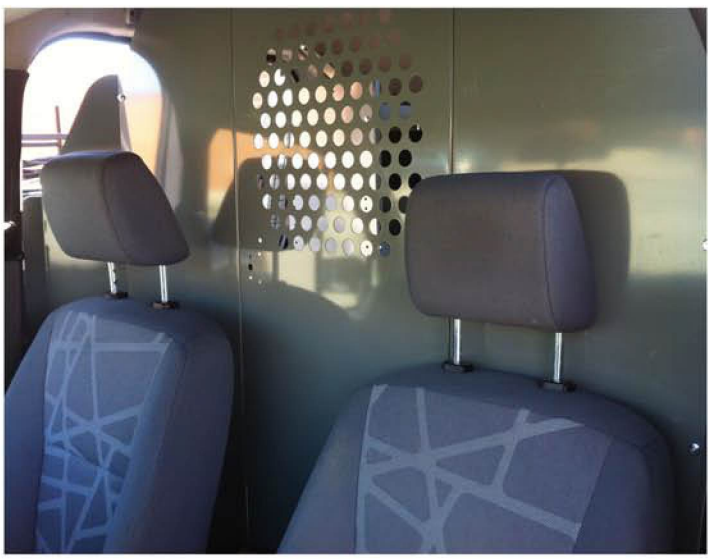

Top brackets Installation



Pos 2






Pos 2a

- Remove foam from the top if needed to install top bracket. Drill holes or make existing holes bigger to fit jacknuts.
- Insert Plus nut into holes and fix with Tool (provided in package) and Impact Driver Power Tool with Nut Driver. (Pos 2, 2a, 3, 4) Make sure Plus Nut and Installation Tool do not turn during installation process.



Pos 3

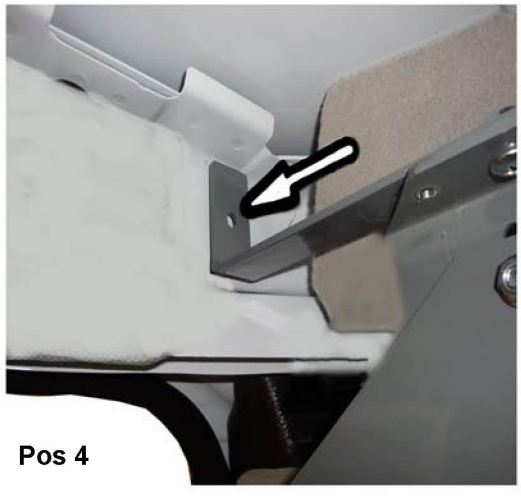


Pos 4


Secure **Partition Top Support 5** to the rib of the Van. Position Partition (side wings with protective rubber) close to plastic pillars.

See additional page for Top Support Installation



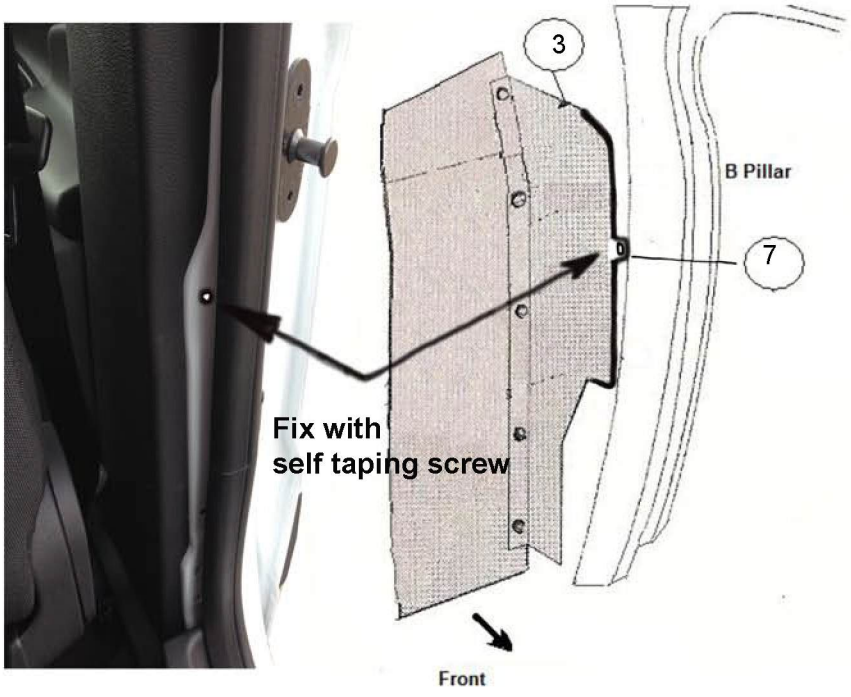

Align Partition ensuring Partition is vertical. **Fix Partition Base Support at the end of intallation - After you fixed side and top**

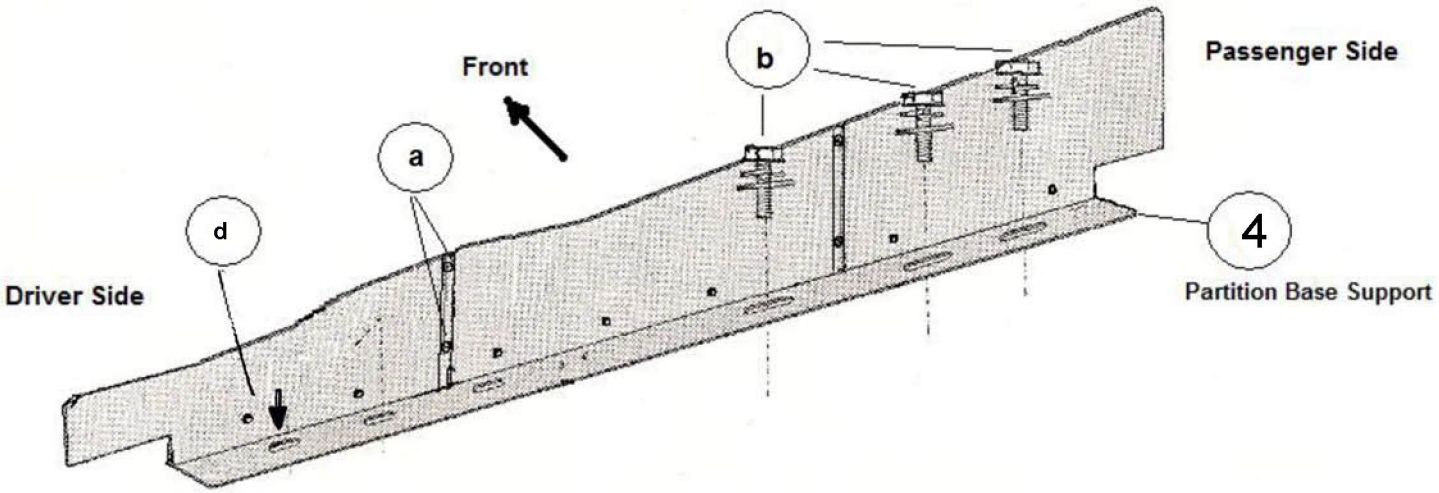

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS, AND CAUTIONS. USE THIS PRODUCT CORRECTLY, AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY

WARNING! The warnings, cautions and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood that common sense and caution are factors which cannot be built into this product, but must be applied by the operator.

How to Install

Van Partition - Ford Transit Connect

If your phone doesn't support **QR codes**, please follow the link below.

https://youtu.be/l35141oTFoU