

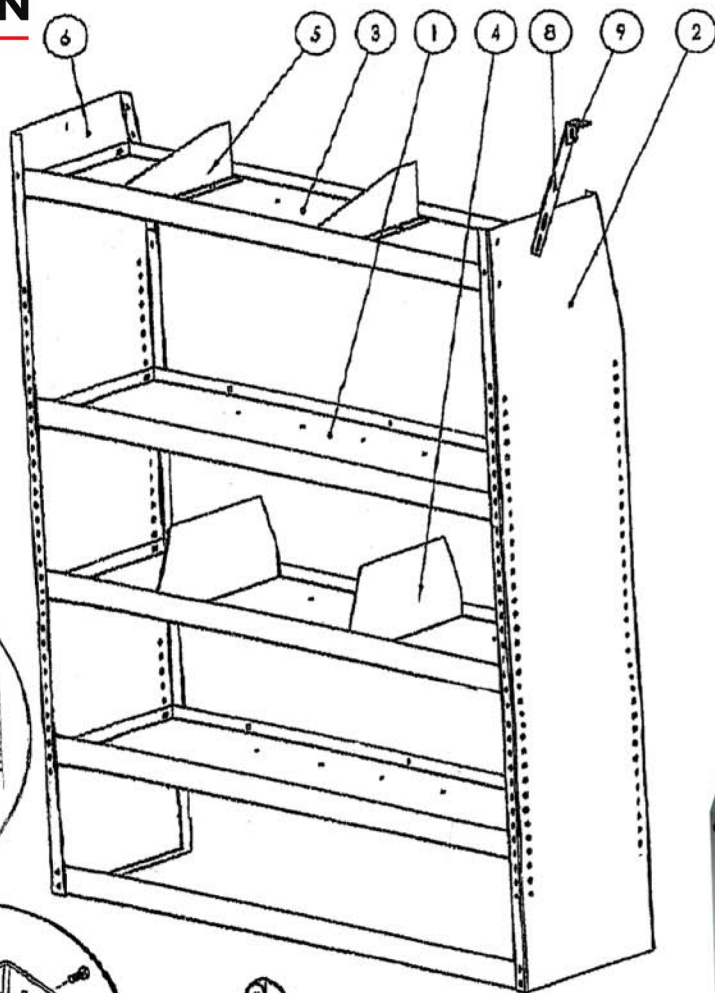
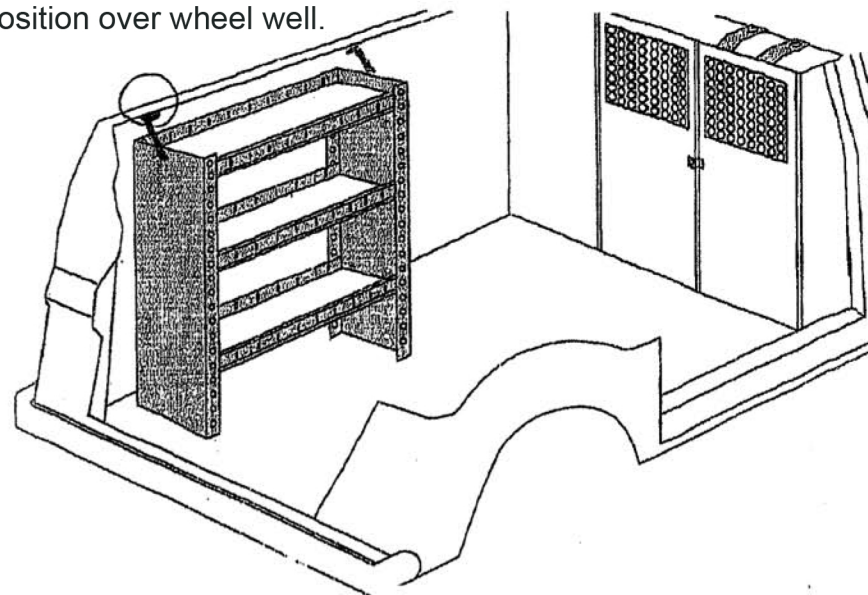
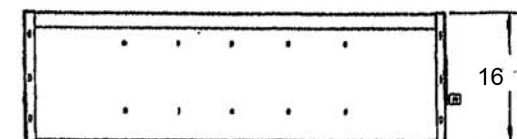
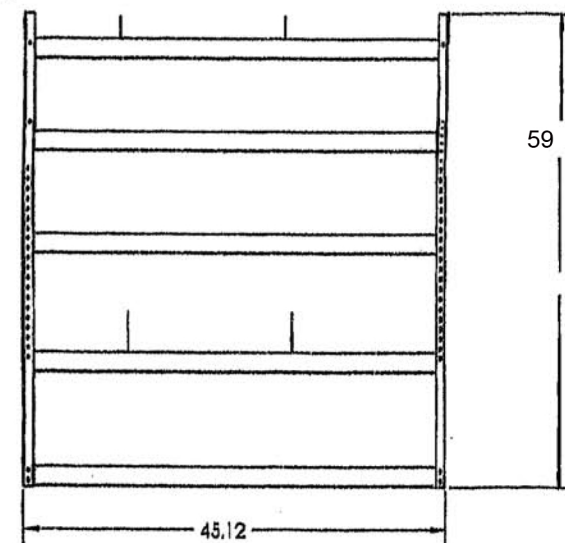
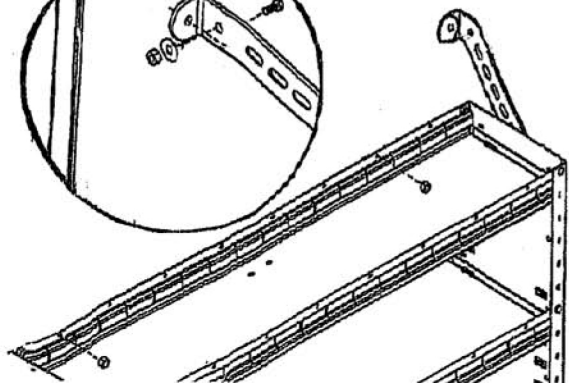


Shelving Unit Position over wheel well.

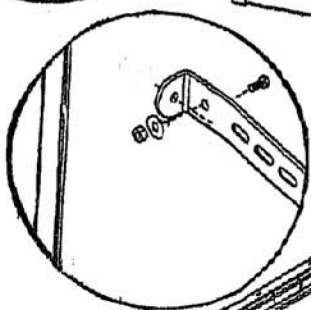

Floor Installation

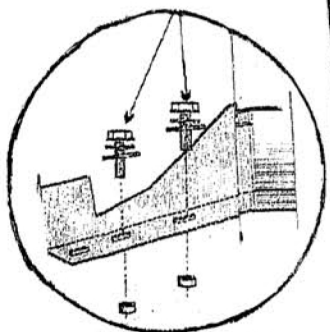

After you Assemble Shelving Unit
Attach Plastic Back Cover with Screws.

Mark installation points and drill holes for fasteners provided (Page 2)
Insert Fasteners and tight them with impact driver.
Secure all 4 installation points with bolts.

Installation Instructions - Transit Connect / Sprinter / ProMaster/ Nissan NV shelving.

Tools / Material Required: 1. Drill; 2.Impact Driver; 3. Nut Driver Socket. 4. Drill Bit (according the size of plus nut provided) 5. Plus nut Installation Tool (provided in the Package)



1. Cordless Drill



2.Impact Driver



3. Nut Driver



4.Drill Bit 3/8



5. Wrench /Ratchet 9/16



6.Water Resistant Silicone



IMPORTANT: It may require two people to install Transit Connect Shelving correctly.

- Position assembly in your vehicle. Mark through the bottom shelving slots - 4 drilling points, 2 on each side. pos 1.



Pos.1

- Drill all marks at rear and at front. **Do Not apply too much pressure while drilling as this may cause in damaging (gas lines, wire harness).** **Wear protective glasses when drilling!**



Pos. 2

wrench - 9/16



pos 3

Insert Plus nut into holes and fix with Tool (provided in package) and Impact Driver Power Tool with Nut Driver. (Pos 2, 2a, 3, 4) Make sure Plus Nut and Installation Tool do not turn during installation process.



pos 4

Watch Installtion Video scan QR code below

